




## CTC 38 MCT

### Carpet Trim - 3/8" REVEAL

- Provides clean transition between hard surface floors and carpet.
- Can be used with tile, wood or stone floors.
- Overhang prevents frayed carpet edges.

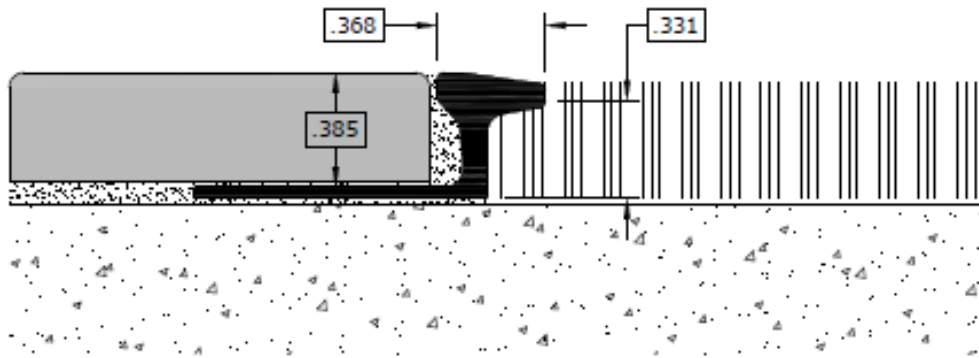

### Installation Instructions

- Adhere perforated leg to sub-floor with hard flooring adhesive.
- Cover entire leg with adhesive and set tile or wood flush with top of carpet trim.
- Leave up to a 1/16" joint along the edge and grout as usual.
- Carpet should be tucked under the overhang when installed.






## CTC 716 MCT

### Carpet Trim - 3/8" REVEAL

- Provides clean transition between hard surface floors and carpet.
- Can be used with tile, wood or stone floors.
- Overhang prevents frayed carpet edges.

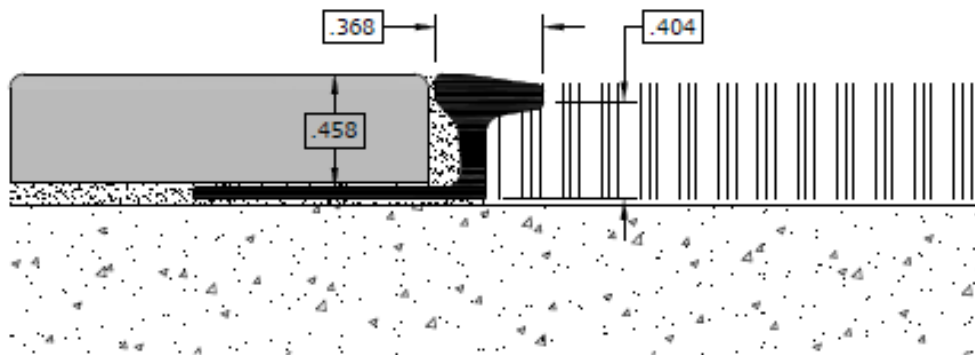

### Installation Instructions

- Adhere perforated leg to sub-floor with hard flooring adhesive.
- Cover entire leg with adhesive and set tile or wood flush with top of carpet trim.
- Leave up to a 1/16" joint along the edge and grout as usual.
- Carpet should be tucked under the overhang when installed.

