


## CTC 14 CAT


### 3/8" REVEAL

- Provides clean transition between hard surface floors and carpet.
- Can be used with stone, tile, or wood floors.
- Overhang prevents frayed carpet edges.

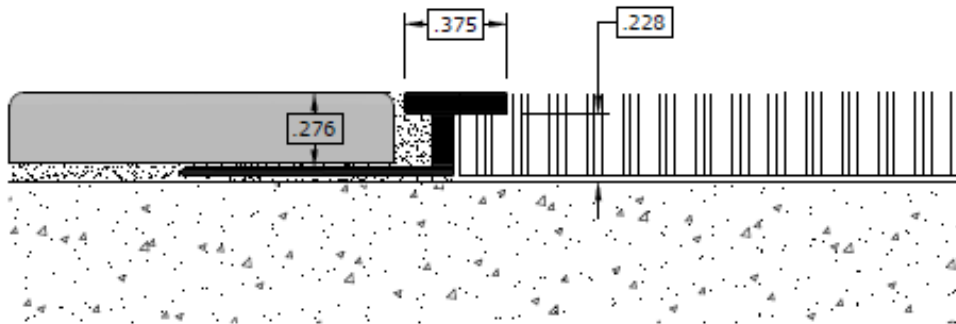

### Installation Instructions


- Adhere perforated leg to sub-floor with hard flooring adhesive.
- Cover entire leg with adhesive and set tile or wood flush or slightly above top of carpet trim.
- Leave up to a 1/16" joint along edge and grout as usual.
- Carpet should be tucked under the overhang when installed.

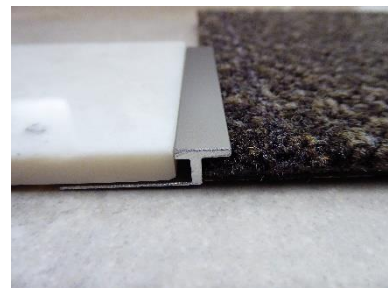

## CTC 1132 CAT


### 3/8" REVEAL

- Provides clean transition between hard surface floors and carpet.
- Can be used with stone, tile, or wood floors.
- Overhang prevents frayed carpet edges.

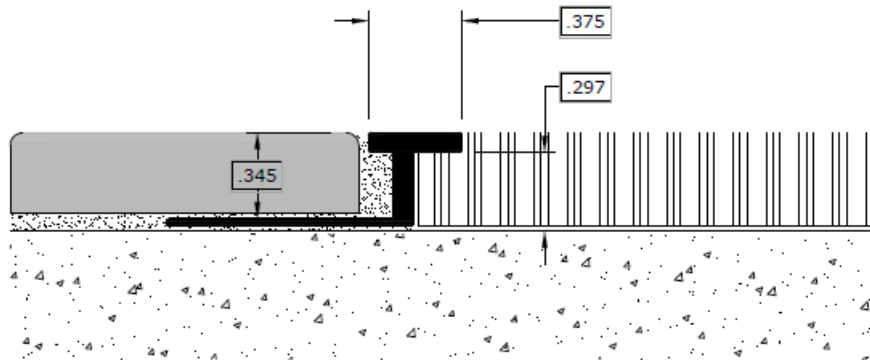

### Installation Instructions


- Adhere perforated leg to sub-floor with hard flooring adhesive.
- Cover entire leg with adhesive and set tile or wood flush or slightly above top of carpet trim.
- Leave up to a 1/16" joint along edge and grout as usual.
- Carpet should be tucked under the overhang when installed.

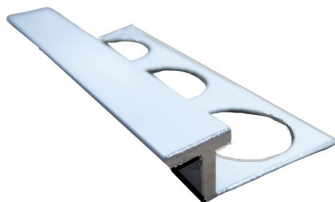

## CTC 716 DB

### 7/16" REVEAL

- Provides clean transition between hard surface floors and carpet.
- Can be used with stone, tile, or wood floors.
- Overhang prevents frayed carpet edges.

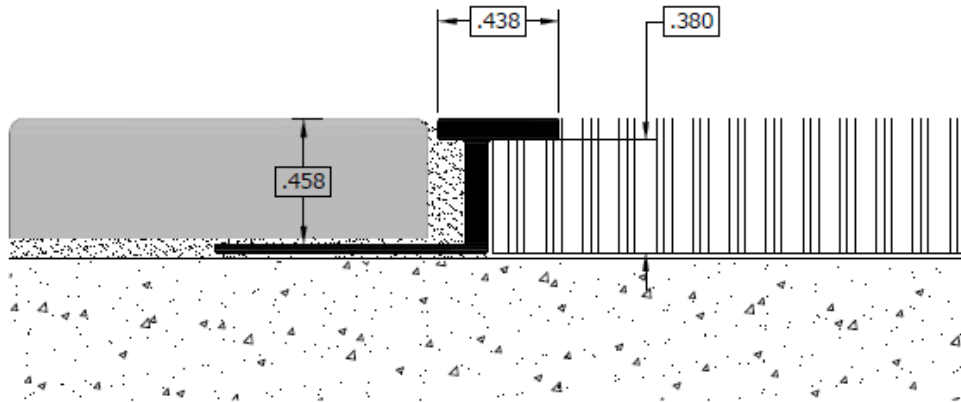

### Installation Instructions

- Adhere perforated leg to sub-floor with hard flooring adhesive.
- Cover entire leg with adhesive and set tile or wood flush or slightly above top of carpet trim.
- Leave up to a 1/16" joint along edge and grout as usual.
- Carpet should be tucked under the overhang when installed.

